


# H400-H600

Drive Roller Replacement

Always Remove Power From Printer  
Before You Do Any Maintenance

# Remove Phillips Screw

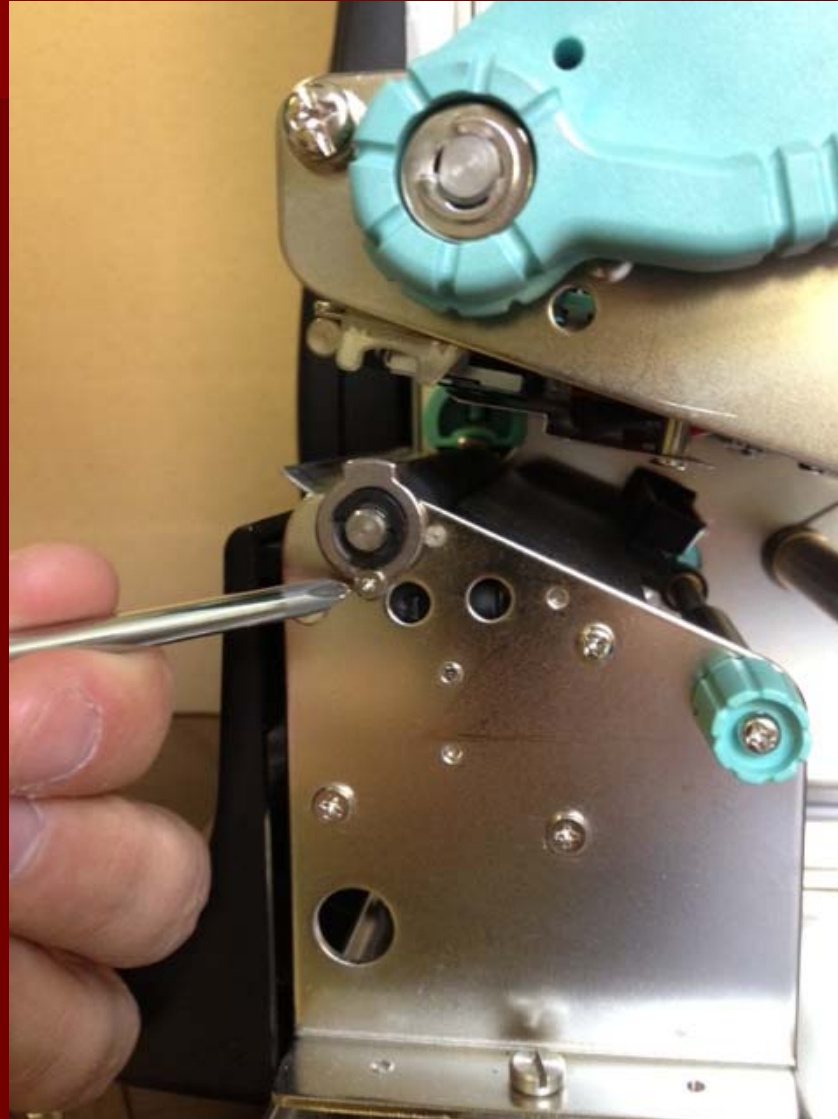



# Remove Printhead



# Remove Drive Roller Hold Down





# Remove Drive Roller



# Reverse Steps to Install New Drive Roller